



English:

- 1.Acknowledgment
- 2.Assembly
- 3.Maintenance
- 4.Warranty

## 1. ACKNOWLEDGMENT


Dear customer, first of all we would like to thank you for your preference in marvic wheels. Every process of our products, is realized in Italy from high qualified staff, that made all the working with the best quality. In this book you can find all the necessary informations for the best assembly and their maintenance.

## 2. ASSEMBLY

Before to install the rotors, the sprocket carriers and other components, lubricate the bearings and spacer seat.

Install the special sprocket with Marvic perforation and tight the bolts to 50 Nm

Install the rotors and tight the bolts to 30 Nm for M8, and to 11Nm for M6, using medium Loctite

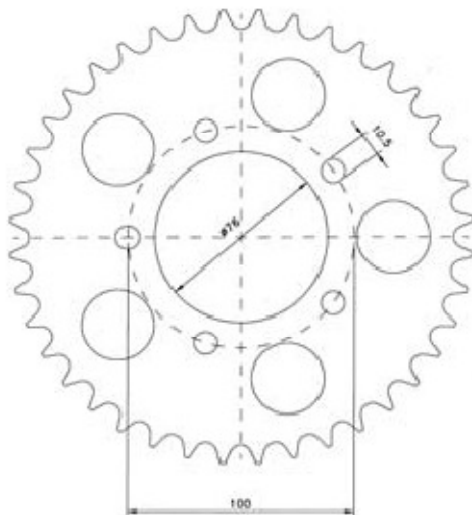

5 holes sprocket  
Ø 10.5mm  
Pcd 100mm  
Centering Ø 76mm



### **3. MAINTENANCE**

All marvic products both magnesium and aluminium, before than painting are treated with special products against the corrosion.

We recommend to clean and wash only with alcohol free and non-aggressive detergent in order to avoid damages to the paint and to the alloy.

Wheels are assembled with air valve, bearings, spaces, dumper rubbers, bots, nuts, flanges, helicoils and other not available on the market, and it is explicitly not recommended the violation of every components of the wheels.

The painting is very important for magnesium products, so the Warranty is not valid if the paint has been removed (by blasting or chemical bath).

### **4. WARRANTY**

The wheels are guaranteed for 12 month against defect and breakages not due to improper use of them.

The return of not conformable goods has to be authorized by our administrative office and the goods has to be returned to our firm on free port.